



HOW TO...


Measure For Pew Kneelers

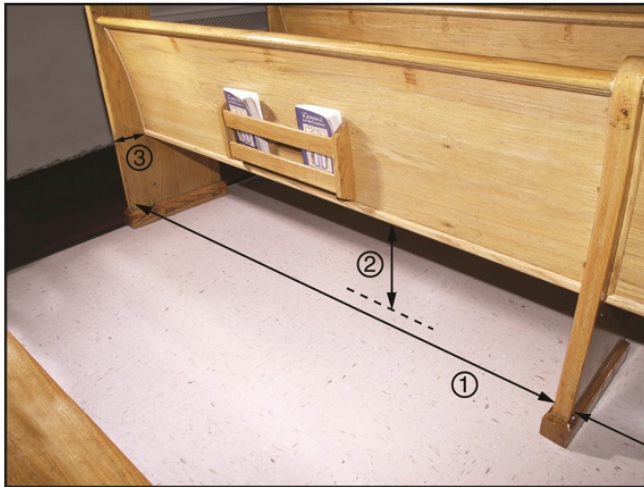

First, measure the opening between the end support and the middle support. (If the base of the support is wider than the support itself, as pictured, measure from above the base.)^① Next, measure the clearance from the floor to the bottom of the pew at the back.^② Now measure the distance from the back of the pew end to the back of the pew seat.^③

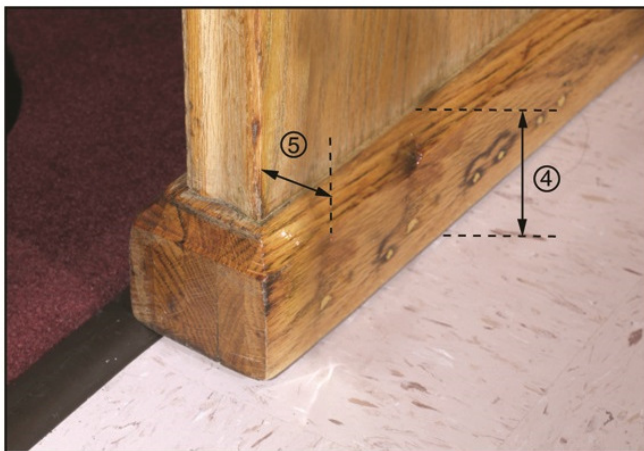

If the pew supports have wider bases (not flush with the support), measure the height of the base^④ as well as the width it extends out from the support.^⑤

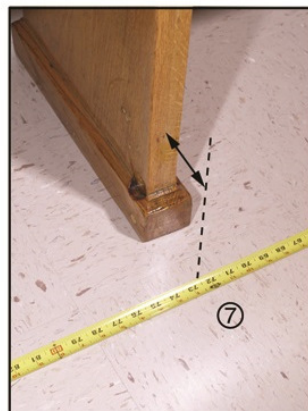

If the back of the middle support does not extend as far out as the end supports, measure how much it is set in. To do this, stretch a measuring tape or other long straight edge from one end support to the other end support.^⑥ Then measure the distance from the back of the middle support to the straight edge.^⑦

Along with the measurements, please send photographs detailing these areas so that we can familiarize ourselves with your particular pews, and possible applications.